

Abubuwan haɗin kelin epoxy mai ɗorawa sabon samfuri ne wanda aka haɓaka bayan launuka masu launi na ruwa mai ruwa, ba wai kawai yana riƙe da yanayin launuka mai launi mai ɗauke da ruwa ba, yana haɓaka aikin samfuri, amma kuma yana sa ginin ya zama mai sauƙi da sauƙi. Taushi mai laushi, yana nuna ƙananan maɓallin keɓaɓɓen kayan ado na ado. Iri-iri launuka, sanya adonku ya zama mai walƙiya. Eco-friendly epoxy guduro subbase hanya bari samfur naka ya zama mai hana ruwa, lalacewa mai jurewa, tabbataccen sifa da hujjar danshi. Sand sandar ƙasa da aka zana a babban zafin jiki yana sa launi ya zama na halitta da kyau kuma ba ya shuɗewa. Har ila yau, yana da haske kamar ainin bayan cluing ba tare da rawaya ko ado ba. Bugu da kari, yanayin haɗin gwiwa yana kama da dacewa da tayal yumbu, kamar yanayin kanta. Za' a iya amfani da samfuri mafi kyau a cikin haɗin tayal na yumbu, dutse, gilashi, tayal mosaic akan bango ko gari a cikin bandaki, kicin, ɗakin kwana da sauransu. Ostiraliya haɗin haɗin gwiwa da samfuran ci gaba don haɓaka aiki mafi kyau, kuma ta hanyar Kwalejin Kwalejin Kimiyya ta China dabarun kula da ingancin ingancin, don sa samfuran su zama masu inganci. Kelin, kwararren mai tayal da keɓaɓɓen mai kera kayayyakin kare muhalli.



Iri launuka don zaɓin ku. Hakanan samar da launuka na al'ada.

- Gray 1#
- Gray 2#
- Gray 3#
- Gray 4#
- Gray 5#
- Gray 6#
- Gray 7#
- Gray 8#
- Gray 9#
- Cement Gray
- Dull Gray
- Silver Gray
- Metal Gray
- Luxury Silver
- Glacier White
- Calaeatta
- Pearl Gold
- Slate Gray
- Terra Brown
- Greyish Green
- Yellow Gray
- Soft Khaki
- Yellowish Brown
- Olive Brown
- Brownness
- Dark Brown
- Reddish Brown
- Rock Bslack



Bayar da Maganin Tazarar Duka Gabafaya



Takaitaccen Tsarin Ginawa



01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile



04 Screw on the nozzle, put on the grout gun



05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forepart



07 Evenly squeeze out the tile agent along the gap



08 Press the grout with professional glue-press tools



09 Don't touch in 4-5 hours and remove excess grout then.



10 Keep the tiles dry in 24 hours

Kwarriyar Matsa Hafin gwiwa



Two Component Caulking Gun



02 Cutter Knife



03 Pointing trowel



04 Brush



05 Forming Stick



06 Perching Knife



07 Masking Tape



08 Stainless Steel Ball



09 Cleaning Awl

Amfanin Kamfanin



Bayanin Masana'antu



Layin Na'urar Yin Kuka



Injin gwaji



Layi Production Line




Sanyin Filing



Ciko Layin Na'ura



Injin da aka lullube da fim

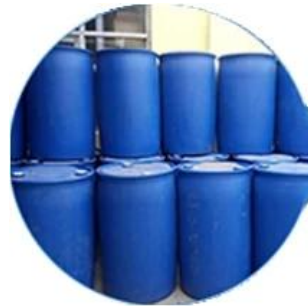

Hakikanin Haja



Haja

Takardar shaida

