

Kelin ruwa mai d'auke da ruwa sabon samfuri ne wanda ya danganta da haɓaka abubuwa biyu da aka haɗa da tayal. Yana da nau'ikan kayan kwalliyar mai na ruwa, tare da ingantaccen aikin muhalli, kasancewar ya wuce matsayin kasa da kasa. Ana iya amfani dashi mafi kyau a cikin mahadan tayal na yumbu, dutse, gilashi, tayal mosaic akan bango ko gari a bandaki, kicin, dakin kwana da sauransu. Ba kawai kunna rawar haɗin kai da hanawa ba ne, amma kuma yana iya kawata tayal yumbu. Yana da nasa fasalin: launuka iri-iri masu kyau, mai kyalli mai haske, kuma saman sa yana haske kamar ainin bayan warkewa. A lokaci guda, hujja ce, tabbataccen danshi, abota ta muhalli, mara lahani da kuma dandano mai laushi, kara ion oxygen mara kyau don tsarkake iska da kawar da formaldehyde. Samfuran fifiko ne a cikin adon dangi. Zaba shi-Kelin China mai kera ruwan tayal mai ruwa. Ostiraliya haɗin haɗin gwiwa da samfuran ci gaba don haɓaka aiki mafi kyau, kuma ta hanyar Kwalejin Kwalejin Kimiyya ta China dabarun kula da ingancin ingancin, don sa samfuran su zama masu inganci.



**Iri-iri launuka don tsinkayenku. Hakanan samar da launuka na al'ada.**



- Pure White
- Ivory
- Lemon Gold
- Pearl Gold
- Light Gold
- Lime Gold
- Amber Gold
- Nobility Gold
- Luxury Gold
- Shiny Gold
- Dazzle Gold
- Moonlight Silver
- Shiny Silver
- Dazzle Silver
- Light Gray
- Noble Gray
- Silver Gray
- Champaign Gold
- Bronze
- Rose Gold
- Coffee Brown
- Black Pearl

**Bayar da Maganin Tazarar Duka Gabaɗaya**



**Takaitaccen Tsarin Ginawa**







01  
Clean the tiles and keep it dry



02  
Polish with tile wax except the glazed tile

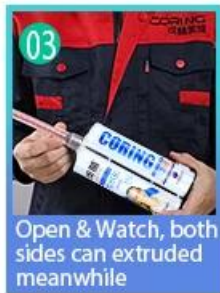

03  
Open & Watch, both sides can extruded meanwhile

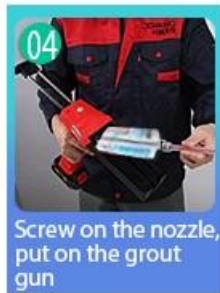

04  
Screw on the nozzle, put on the grout gun




05  
Inclined cut the top of the nozzle in 45°



06  
Squeeze out 60-80cm long grout in the forepart




07  
Evenly squeeze out the tile agent along the gap

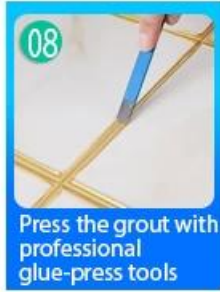

08  
Press the grout with professional glue-press tools



09  
Don't touch in 4-5 hours and remove excess grout then.

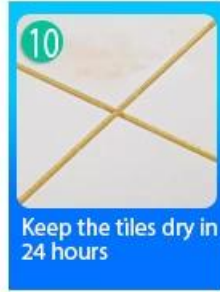

10  
Keep the tiles dry in 24 hours

### Kwarriyar Matsa Hafin gwiwa



Two Component Caulking Gun



02  
Cutter Knife



03  
Pointing trowel



04  
Brush



05  
Forming Stick



06  
Perching Knife



07  
Masking Tape



08  
Stainless Steel Ball



09  
Cleaning Awl

### Amfanin Kamfanin



## Bayanin Masana'antu



Layin Na'urar Yin Kuka



Injin gwaji



Layi Production Line




Sanyin Filing



Ciko Layin Na'ura



Injin da aka lullube da fim

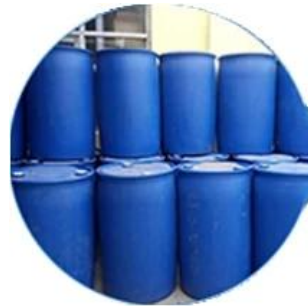

Hakikanin Haja



Haja

## Takardar shaida

