


Kelin polyurea tile grout sabon samfuri ne mai jujjuyawa. Saboda POLYUREA s kyakkyawan lalacewa-juriya, lalata-juriya, juriya-rawaya, juriya mai zafi da sauran manyan ayyuka, ana amfani dashi sosai a cikin masana'antar soja, sararin samaniya da masana'antar tasoshin. Bugu da kari, yana karfafawa da sauri, ginawa da tsabta a cikin rana guda, ajiye lokaci da farashin aiki. Mafi mahimmanci, ana iya gina shi a cikin rigar karkashin kasa, wanda ke magance matsalar da ba za a iya ginawa ba saboda yanayi da wasu dalilai. Ostiraliya hadin gwiwa bincike da ci gaban kayayyakin don yin ingantacciyar aiki, kuma ta hanyar Cibiyar Nazarin Kimiyya ta kasar Sin jagorar kula da ingancin dabaru, don samar da samfuran "ingantattun inganci.

Samfuri na [China tile m masana'anta](#) za a iya amfani da mafi alhëri a cikin gidajen abinci na yumbu tayal, dutse, gilashi, mosaic tayal a bango ko gari a gidan wanka, kitchen, ðakin kwana da sauransu. China Kelin [cika gwangwani dillali](#) ya shafe shekaru 14 a wannan fanni. Muna da namu R&D tawagar da masana'anta. Saboda abu kare muhalli abu ne mai sauki yi, samun m mabukaci yarda. So Kelin [gibba caulking filler smai habakawa](#) zai samar muku da kayayyaki masu inganci. Barka da zuwa tuntubar [China mai kara kuzari factory](#) lokacin da kuke bukata.



Launuka iri-iri don zaɓinku. Hakanan samar da launuka na al'ada.

- Gray 1#
- Gray 2#
- Gray 3#
- Gray 4#
- Gray 5#
- Gray 6#
- Gray 7#
- Gray 8#
- Gray 9#
- Cement Gray
- Dull Gray
- Silver Gray
- Metal Gray
- Luxury Silver
- Glacier White
- Calaeatta
- Pearl Gold
- Slate Gray
- Terra Brown
- Greyish Green
- Yellow Gray
- Soft Khaki
- Yellowish Brown
- Olive Brown
- Brownness
- Dark Brown
- Reddish Brown
- Rock Bslack

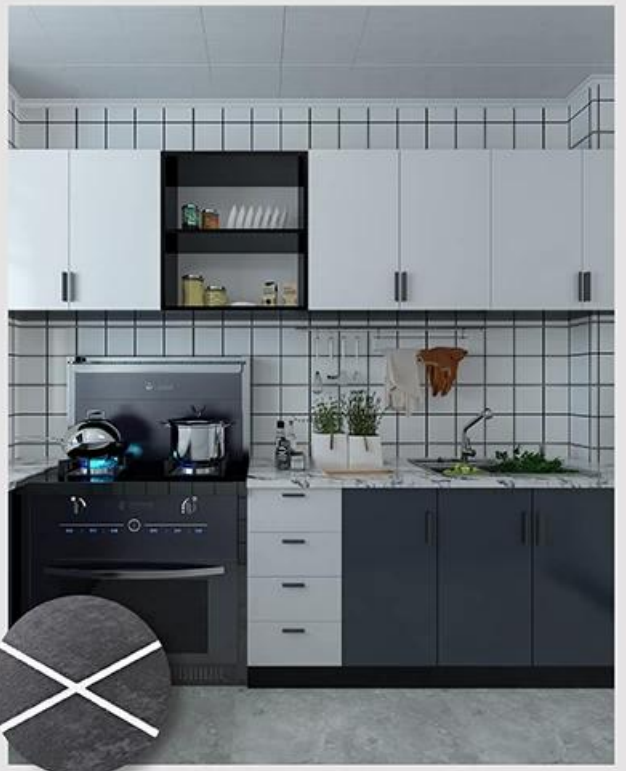

Samar da Maganin Tazarar Daki Gabaɗaya



Takaitaccen Tsarin Gina



01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile



04 Screw on the nozzle, put on the grout gun



05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forepart



07 Evenly squeeze out the tile agent along the gap



08 Press the grout with professional glue-press tools



09 Don't touch in 4-5 hours and remove excess grout then.



10 Keep the tiles dry in 24 hours

Kayan aikin Matsawa na Hadin gwiwa



Two Component Caulking Gun



02 Cutter Knife



03 Pointing trowel



04 Brush



05 Forming Stick



06 Perching Knife



07 Masking Tape



08 Stainless Steel Ball



09 Cleaning Awl

Amfanin Kamfanin



Bayanin Masana'antu



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

Takaddun shaida

