

Kelin waterborne epoxy adhesive samfurin muhalli ne na karshe. Kuma mu masu samar da tile ne tare da cikakken karfi mai karfi. Rubutun Matte, yana ba ku salon kayan ado mai karancin maɓalli, kuma saman haɗin gwiwa yayi kama da dacewa da tayal yumbura. Launuka iri-iri, bari kayan adonku su sanya kyalli. Hanyar da ke karkashin kasa na guduro na epoxy na ruwa ya sa samfurin ya zama cikakken muhalli. Yashi na dabi'a da aka kirƙira a babban zafin jiki yana sa launi ya fi na halitta da kyau kuma baya dusashewa.

Samfurin na **China marmara tayal grout m makera** rcan za a fi amfani da shi a cikin haɗin gwiwa na yumbura, dutse, gilashi, tayal mosaic a bango ko gari a cikin gidan wanka, kicin, ɗakin kwana da sauransu. Yana da samfurin fifiko a cikin kayan ado na iyali, yana kara ion oxygen mara kyau don tsarkake iska. Ostiraliya na haɗin gwiwar bincike da samfuran haɓaka don samar da ingantaccen aiki, kuma ta hanyar Cibiyar Nazarin Kimiyya ta Sinanci jagorar kula da ingancin dabaru, don tabbatar da ingancin samfuran. Barka da zuwa tuntuɓar mu- **Wakilin dinki na kasar Sin mai bayarwa** haɗin gwiwa.



**Launuka iri-iri don zaɓinku. Hakanan samar da launuka na al'ada.**

- Gray 1#
- Gray 2#
- Gray 3#
- Gray 4#
- Gray 5#
- Gray 6#
- Gray 7#
- Gray 8#
- Gray 9#
- Cement Gray
- Dull Gray
- Silver Gray
- Metal Gray
- Luxury Silver
- Glacier White
- Calaeatta
- Pearl Gold
- Slate Gray
- Terra Brown
- Greyish Green
- Yellow Gray
- Soft Khaki
- Yellowish Brown
- Olive Brown
- Brownness
- Dark Brown
- Reddish Brown
- Rock Bslack



**Samar da Maganin Tazarar Daki Gabaɗaya**



**Takaitaccen Tsarin Gina**



01  
Clean the tiles and keep it dry



02  
Polish with tile wax except the glazed tile



03  
Open & Watch, both sides can extruded meanwhile



04  
Screw on the nozzle, put on the grout gun



05  
Inclined cut the top of the nozzle in 45°



06  
Squeeze out 60-80cm long grout in the forepart



07  
Evenly squeeze out the tile agent along the gap



08  
Press the grout with professional glue-press tools



09  
Don't touch in 4-5 hours and remove excess grout then.



10  
Keep the tiles dry in 24 hours

### Kayan aikin Matsawa na Hadin gwiwa



Cutter Knife



Pointing trowel



Brush



Rainbow Scraper



Stirring Knife




The sponge



Scouring Pad

### Amfanin Kamfanin

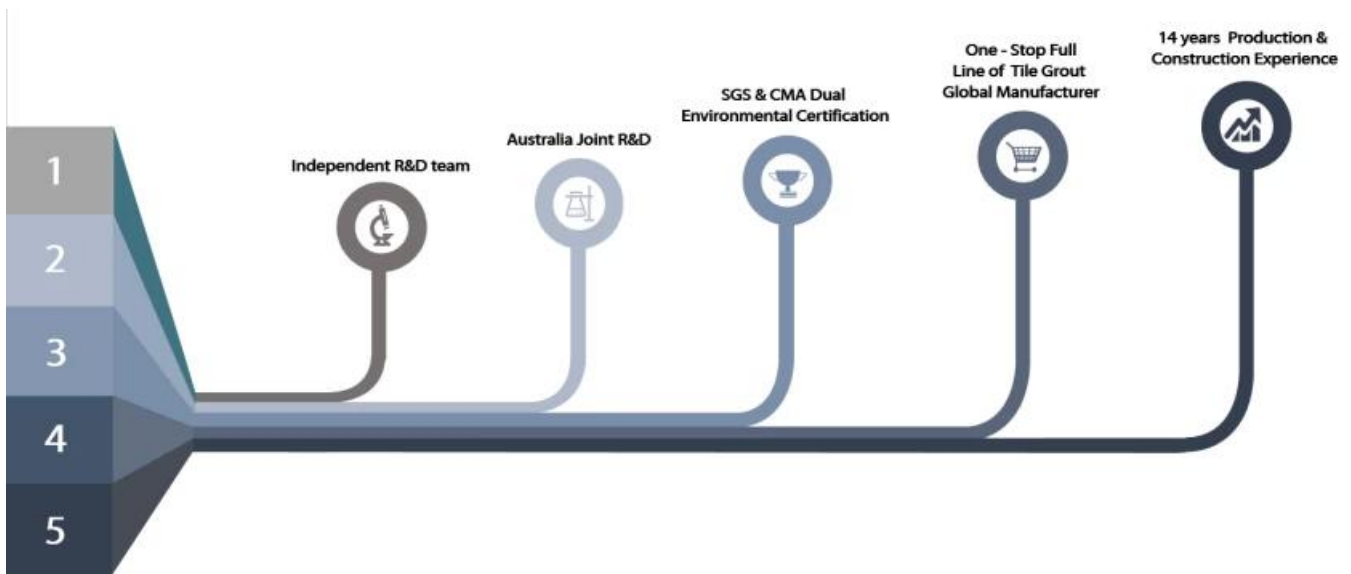

## Bayanin Masana'antu



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Raw Material Stock



Stock

## Takaddun shaida

